

11. 轴的布置型式

Identifications of Shaft Arrangements



JRP 系列行星齿轮箱
 Series Planetary Gear Units

		齿轮箱卧式安装 Horizontal gear unit position 5...		齿轮箱竖式安装 Vertical gear unit position 9... 1)		6...
同轴式行星齿轮箱 Coaxial planetary gear units	0	JRP.N.				
			500	900	600	
带斜齿轮级的平行轴行星齿轮箱 Combined helical gear planetary gear units	1	JRP.S.		1) 511		
				512		
				513		
				514		
			910	610		
带伞齿轮级和斜齿轮级的直交轴行星齿轮箱 Combined bevel-helical gear planetary gear units	2	JRP.K.		1) 521		
				522		
				523		
				524		
			920	620		
带伞齿轮的直交轴行星齿轮箱 Combined bevel gear planetary gear units	3	JRP.L.		1) 531		
				532		
				533		
				534		
			930	630		
扭力臂支撑 Torque reaction arm	5			551	*)从输入轴端观察 **)敬请垂询	*)Viewing on input shaft **)please consult us
				552		
				553		
				554		
				555		
				556		

1)必须检查润滑油供给情况

1)Lubricant supply must be checked